


Parts Included

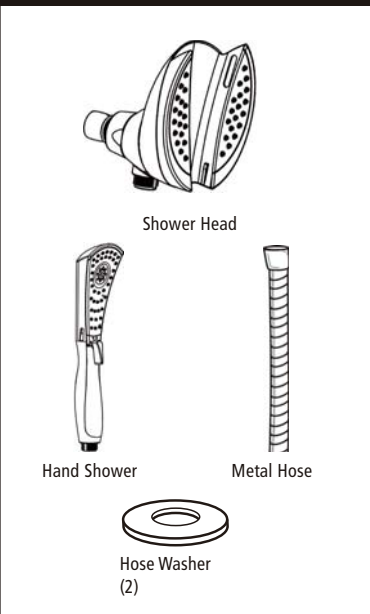

Cleaning of Parts

Only clean with a mild non-abrasive detergent and soft cloth.

Note: Any other cleaning product not specifically designed for cleaning plastic or metal surfaces may damage the finish.

Limited Lifetime Warranty

All parts and finished of the Delta® faucet are warranted to the original consumer purchaser to be free from defects in material & workmanship for as long as the original consumer purchaser owns their home. Delta Faucet Company recommends using a professional plumber for all installation & repair. Delta will replace, FREE OF CHARGE, during the warranty period, any part of finish that proves defective in material and/or workmanship under normal installation, use & service. Replacement parts may be obtained by calling 1-800-354-DELTA (in the U.S and Canada) or by writing to:

<p>In the United States: Delta Faucet Company Product Service 55 E. 111th Street Indianapolis, IN 46280</p>	<p>In Canada: Masco Canada Limited Plumbing Group 350 South Edgeware Road, ST. Thomas, ON. N5P 4L1</p>
--	---

This warranty is extensive in that it cover replacement of all defective parts and even finish, but these are the only two things that are covered. LABOR CHARGES AND/OR DAMAGE INCURRED IN INSTALLATION, PEPAIR, OR REPLACEMENT AS WELL AS ANY OTHER KIND OF LOSS OR DAMAGES ARE EXCLUDED. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to Delta for all warranty claims. THIS IS THE EXCLUSIVE WARRANTY BY DELTA FAUCET COMPANY, WHICH DOES NOT MAKE ANY OTHER WARRANTY OF ANY KIND, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY.

This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby extended a five year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of the warranty. This warranty is applicable to Delta faucets manufactured after January 1, 1995.

Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to this faucet as a result of misuse, abuse, or neglect, or any use of other than genuine Delta® replacement parts WILL VOID THE WARRANTY.


This warranty gives you specific legal rights, and you may also have other rights which vary from state/province to state/province. It applies only for Brizo® faucets installed in the United States of America, Canada, and Mexico.

©2011 Masco Corporation of Indiana

WARNING: Plumbing Codes require that shower heads and hand showers provide a small but continuous flow of water (trickle) when in "PAUSE" mode. Because of this continuous flow, in certain circumstances pressure variations in the water line and/or changes in the position of shower temperature control handle while in "PAUSE" mode could result in dramatic changes to the temperature of the water when the shower head or hand shower is returned to the "ON" position.


ALWAYS point the shower head away from yourself when returning to the "ON" position and feel the water with your hand before resuming your shower to ensure the water flow is not too hot or too cold. DO NOT allow children or others who might not understand this warning to use the "PAUSE" function.

1. Install the Shower Head

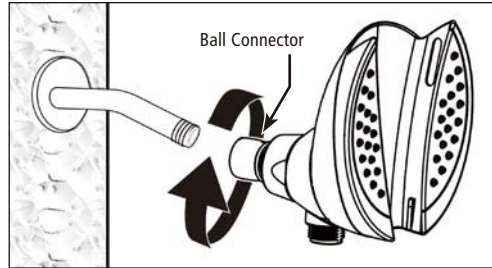


- Turn off water supply before installing the Shower Head.
- Remove existing Shower Head from Shower Arm.
- Apply plumber tape (not included) to Shower Arm, if necessary, to stop or prevent leaks.
- Hand tighten the Ball Connector of the Shower Head to the Shower Arm.

2. Install Hand Shower

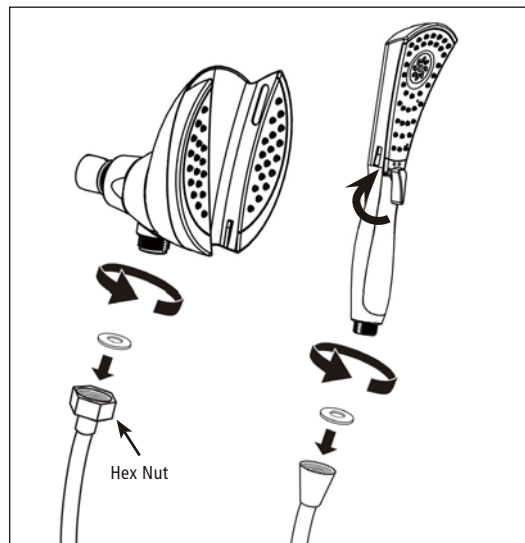


- Place the hose washers into the hose nuts on each end of the hose.
- Attach the end of the hose with a hex nut to the shower head. Connect the other end of the Metal Hose to the Hand Shower. All connections should be able to be made by hand tightening only.
- To change spray modes, turn the lever (located on the front of the Hand Shower) left or right to the desired setting.

3. Insert Hand Shower into Shower Head

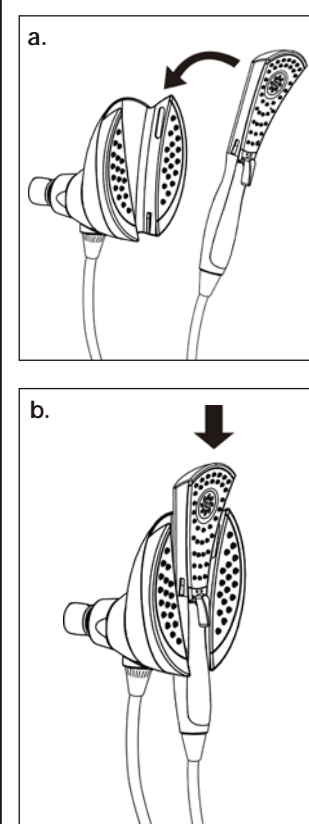


- Slide Hand Shower into the top of the Shower Head.
- Gently push the Hand Shower down into the Shower Head.
 - If the Shower Head moves when inserting or removing the Hand Shower, hand tighten the connection between the Shower Head and the Ball Connector.

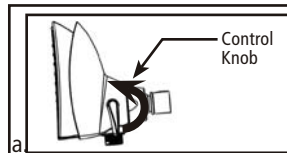


2a. Changing Modes From Shower Head, to Hand Shower, or to Both

- Turn knob on side of Shower Head to change between:
 - Shower Head only
 - Shower Head and Hand Shower
 - Hand Shower only

4. Removing the Hand Shower from the Shower Head

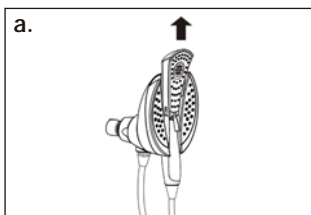

- Push the lower part of the Hand Shower upwards, away from the Shower Head.

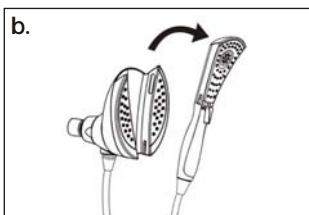

- Pull the Hand Shower away from the slot in the Shower Head.