

INSTALLATION INSTRUCTIONS



DXV Belshire™ Vanity

Models D19085030, D19086030

Thank you for selecting DXV. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.


To maintain the beauty of the finish, avoid placing the furniture in direct sunlight, as sunlight causes fading. Also avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents, and air conditioning units. Avoid placing furniture directly under windows.

⚠ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!

For rough-in dimensions and supply line information, see spec page or web site

RECOMMENDED TOOLS AND MATERIALS


Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work has begun.

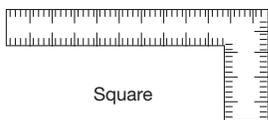

Square



Level

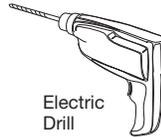

Electric Drill




Tape Measure



Phillips Screwdriver

VANITY INSTALLATION

- Unpack unit carefully, taking care not to damage corners, unit is heavy.
- Provide suitable 2x6 reinforcement required for anchoring the vanity to the wall using the vanities cleat.
- Ensure roughin water supply lines and drain correctly fit within openings of vanity. Suitable space is provided for this.

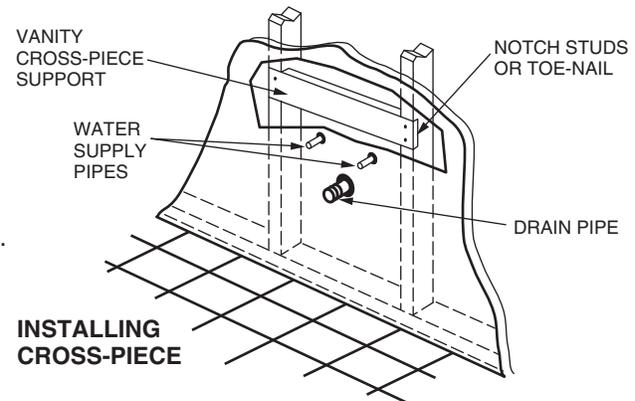

1

Remove vanity drawers which will aid moving and handling of vanity and to provide room to connect water supply lines and drain. To do so, open top drawer first and pull orange tab (under drawer) towards the center of drawer on both left and right sides which will release the drawer from the side rails or tracks. Pull drawer up and out. Repeat for other drawer(s).

2


Carefully unpack marble top and lay on a protective cushioned surface to avoid any possible scratching or chipping (marble top is heavy).

NOTE: Bottom side of marble has threaded inserts.

SAVE FOR FUTURE USE


3

Carefully unpack lavatory and place in the center of opening on the underside of the marble top as an under counter mount installation. Ensure lavatory is centered evenly over underside of marble top opening front to back, side to side and trace a pencil line around the perimeter of the lavatory onto the underside of the marble top.

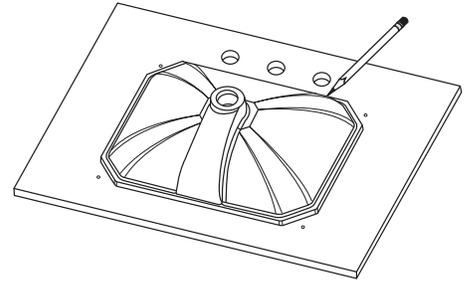

4


Remove lavatory and apply silicone sealant around the traced pencil line of the marble top.

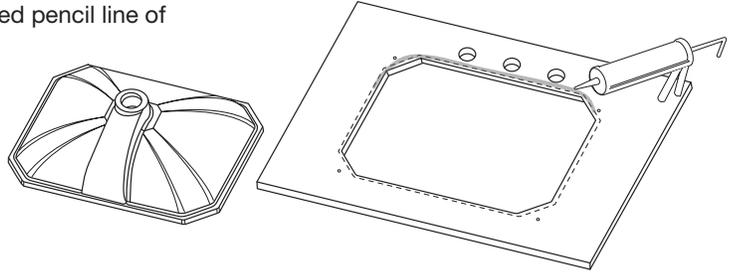

5

Place lavatory back onto underside of marble top within the traced pencil line. Further attach the sink to the marble top using the supplied sink clips and screws at 4 locations to hold lavatory in place.

Carefully tighten all 4 screws alternately, do not overtighten. Clean off any sealant that may have run out.

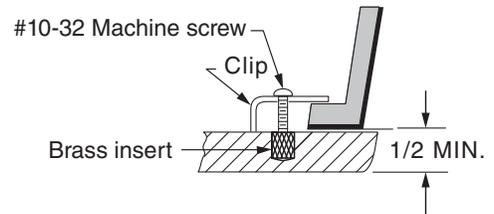

6

Install faucet and drain to sink according to manufacturer's instructions.

NOTE: If installing optional vanity legs, proceed to Installation of Vanity Legs on page 4


7

Mark the wall using the provided wooden cleat at each of the pre drilled pilot hole locations where the vanity will be hung and level.

NOTE: If using optional vanity legs, ensure height of vanity once hung on cleat is at the correct height.

8


Screw the cleat into place using #10 x 2" screws. Carefully lift the vanity onto the cleat and ensure vanity sits flat and square to the surface of the wall with no gaps between vanity and wall. Ensure vanity is level.

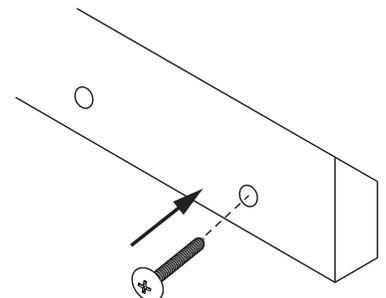

9


Screw vanity into cross support behind the wall to firmly attach vanity to the wall.

Place assembled combination of marble counter top and lavatory onto top of vanity. Ensure marble top is flush to rear of wall and centered left to right over the vanity and check level front to back, left to right. Also check that drain and water supply lines correctly fit when drawers are installed.

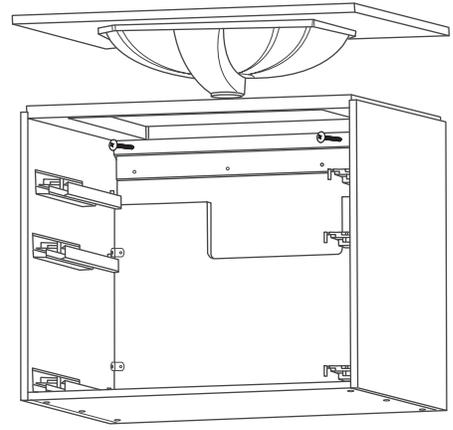

10

Remove marble counter top and apply a generous amount of adhesive on surface of vanity where the marble counter top will sit to hold top in place.

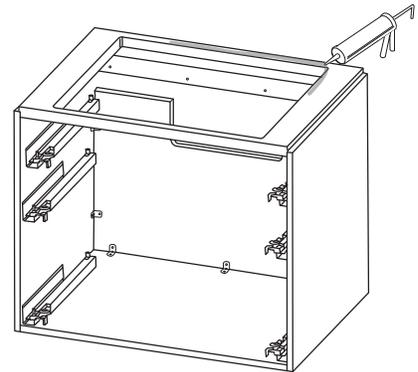


11

Carefully place marble top back onto vanity and position in place as noted above. Remove any adhesive that may run out.

Connect drain and water supply lines and check for leaks.

Replace all 3 drawers. NOTE: If drawers do not close smoothly or correctly, they may require an adjustment which can be done by moving the white tabs next to the orange tabs in or out which will raise or lower the drawer on the rails or tracks.

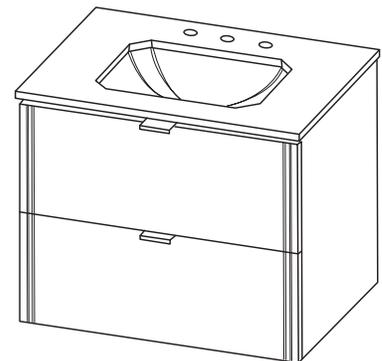

Vanity Legs

Model D19087000 Series

NOTE: Vanity legs are optional and need to be purchased and considered before the actual installation of the vanity to ensure height dimensions are correct for water supply lines and waste drain.

LEG INSTALLATION



- Carefully place vanity on its back side to expose the underside/bottom of the vanity.
- Threaded mounting holes for supplied screws are installed on both sides of the vanity.

- Vanity legs are screwed in place with the supplied screws on each side.

NOTE: There is a Front and Rear (back) side to the legs which can be identified by a slight opening of the upper horizontal frame, which would be the rear.

- Once all 6 screws are installed, continue to install the vanity as per steps for "Vanity Installation".

NOTE: Once vanity is completely secured onto cleat, it may be necessary to adjust the leveling feet at the bottom of the legs on the floor to adjust for height.

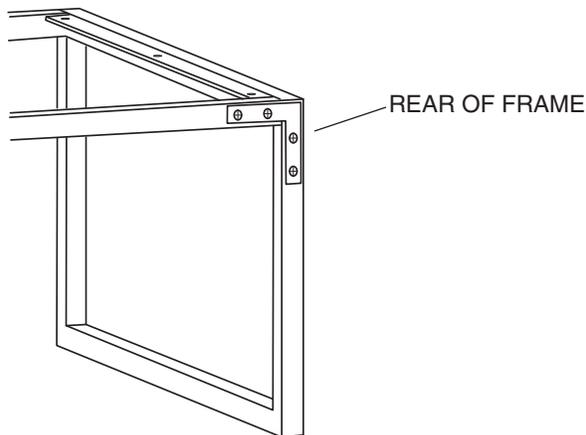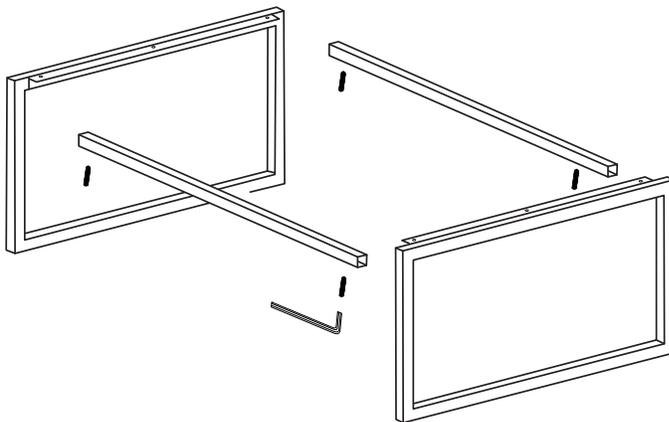

In the United States:

DXV
One Centennial Avenue
Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734
www.DXV.com

In Canada:

DXV
5900 Avebury Road
Mississauga, Ontario
L5R 3M3
Canada

Toll Free: 1-800-387-0369
Local: 905-306-1093
Fax: 1-800-395-1498
www.DXV.ca

In Mexico:

DXV
Via Morelos 330
Col. Santa Clara Coatitla
Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200
www.DXV.mx