

# Assembly & Installation Instructions

Flora Chandelier 19104412

**A380**

Page 1 of 2

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.**

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

**Caution:** Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

## Install the Canopy (Figure 1)


### Component Parts

A	Crossbar	E	Canopy	I	Fixture Loop
B	Lag Screw (2)	F	Loop Collar	J	Ground Screw
C	Threaded Nipple	G	Threaded Loop	K	Cupped Washer
D	Lock Nut	H	Chain	L	Hex Nut

**Caution:** This fixture must be supported independently of an outlet box. Crossbar is designed to fit in the bottom of a standard metal 4" octagonal outlet box.

**Caution: Be sure power is off at the main breaker box prior to installation.**

1. Carefully unpack the fixture from the carton.
2. Drill two holes through the back of the outlet box and using two lag screws (C) attach cross bar (A) to a structural member in the ceiling, centering the crossbar in the outlet box. Lag screws have been supplied with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.
3. Unthread loop collar (F) from threaded loop (G). Thread lock nut (D) and threaded loop (G) onto nipple, place canopy (E) over threaded loop and adjust nipple length to ensure a snug canopy fit. Once the length is determined, set the canopy aside and lock nipple position by tightening the locknut (D) against the crossbar (A).
4. Attach one end of the chain (H) to the fixture loop (I)
5. Slide loop collar (F) and canopy (E) over chain.
6. Attach the other end of the chain to the threaded loop (G). Slip fixture wires through loop collar (F) and the canopy (E). Thread the fixture wires through every other link of the chain (H) and up through the threaded loop (G) and nipple (B) into the outlet box.
7. Using suitable wire connectors (not provided), connect fixture wires to supply wires (ribbed side of fixture cord to white supply, smooth side of fixture cord to black supply). Ground the crossbar (A) using the ground screw (J), cupped washer (K) and hex nut (L) to secure a pigtail lead to the crossbar. Connect all ground wires (bare copper or green to bare copper or green). Push wires back into outlet box.  
**Caution:** Make sure wire connectors are twisted on securely, and no bare wire is exposed.
8. Slide the canopy up the chain and over the threaded loop (G), securing with loop collar (F). Make sure no wires are pinched between the canopy (E) and the ceiling or crossbar (A).

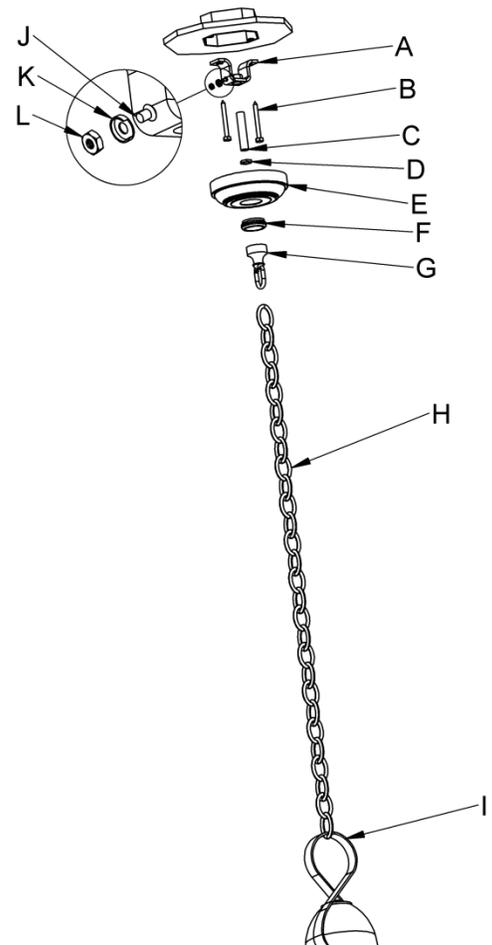

(Figure 1)

# Assembly & Installation Instructions

Flora Chandelier 19104412

**A380**

Page 2 of 2


(continued)

## To Install Glass (Figure 2)

### Component Parts

- M Retaining Ring Tool
- N Bulb (12)
- O Retaining Ring (12)
- P Wave Washer (12)
- Q Glass (12)
- R Socket (12)

1. Retaining rings (O) are shipped installed on sockets (R). Remove retaining rings (O) from all sockets (R).
2. Install light bulb (N). Be careful not to touch bulb with bare hands; oil from the hands will dramatically reduce bulb life.  
**Note:** The bulbs included are based on our design preference; see the fixture wattage sticker for Max wattage information.
3. Slip glass (Q) over bulb and socket. Install Wave Washer (P) over socket as shown. Thread retaining ring (O) onto socket (R) using the provided retaining ring tool (M).
4. Repeat steps 2 & 3 for remaining sockets.
5. Restore electricity at the main breaker.

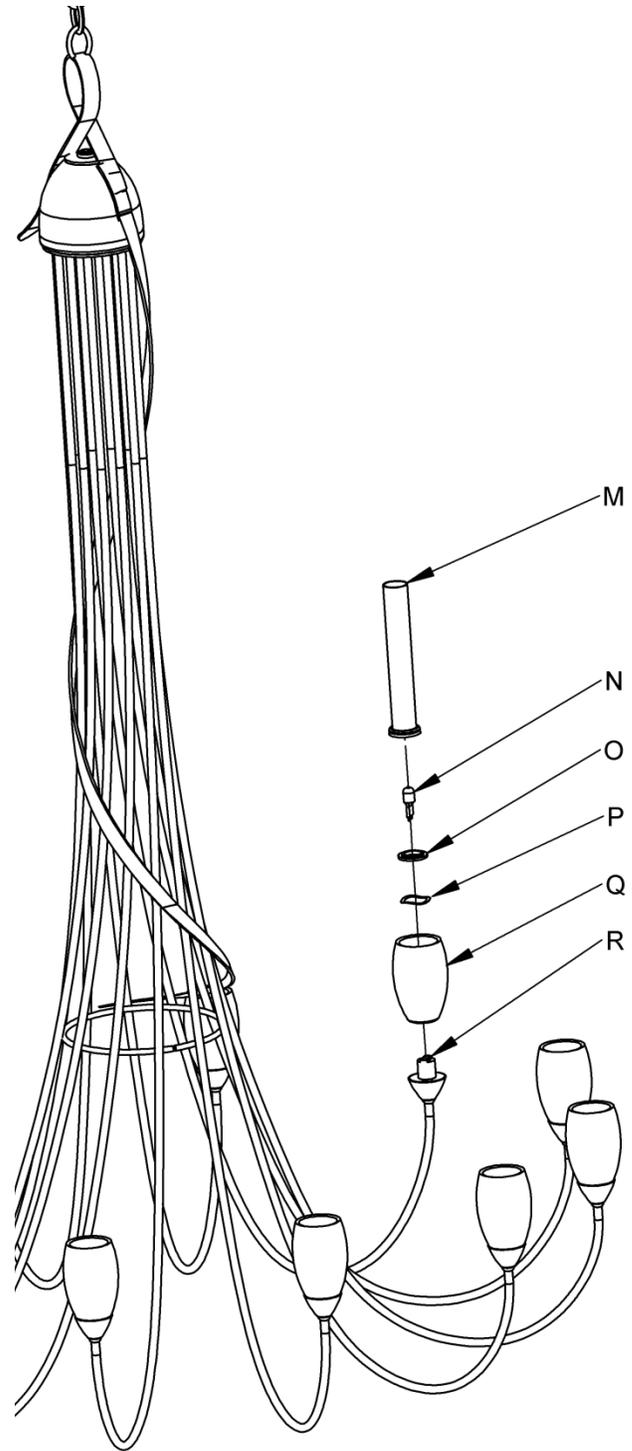

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

**HUBBARDTON FORGE®**

Hand-Forged, Vermont-Made Lighting and Accessories  
P.O. Box 827, 154 Route 30 South, Castleton, Vermont 05735

32252