

INSTALLATION INSTRUCTIONS
HANDSHOWER ASSEMBLY
MODEL NO. 280G, 280H

NEWPORT BRASS®

Flawless Beauty. From Faucet to Finish.™

We recommend Installation of this product by a Professional Plumbing Contractor

Note: The use of petroleum based plumber's putty on our products will nullify the warranty.

We recommend the use of clear silicone sealing materials.

All trim must be installed on finished wall surface.


Supply Elbow Installation:

Based on finished wall thickness, installer must use an appropriate length 1/2" NPT NIPPLE (1), not included, for SUPPLY ELBOW (3) installation.

Apply thread sealant to both ends of the NIPPLE (1) and thread into FITTING (2) behind finished wall.

Attach SUPPLY ELBOW (3) onto other end of NIPPLE (1).

Attach HOSE (10) to SUPPLY ELBOW (3). See Figure 1

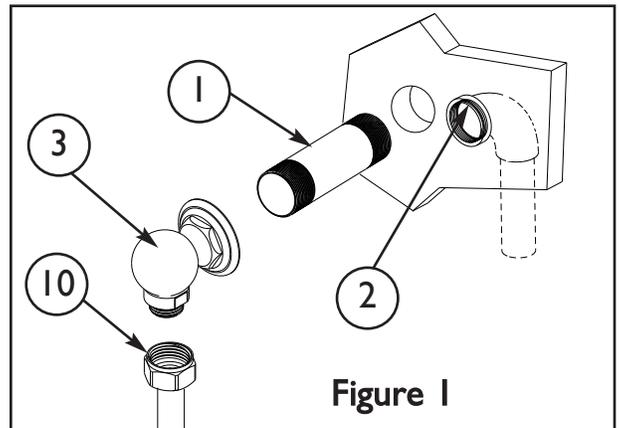

Hand Shower Holder Installation:

Locate the desired position of Hand shower on finished wall.

Mark wall and drill 5/16" hole for wall ANCHORS (5).

Secure BASE (6) in place with SCREWS (7) by tightened into ANCHORS (5). Secure HOLDER (8) onto BASE (6) with SET SCREW (9). See Figure 2.

Attach other end of HOSE (9) to HAND SHOWER (4) and place in HOLDER (8). See Figure 3.

