



AIR SWITCH

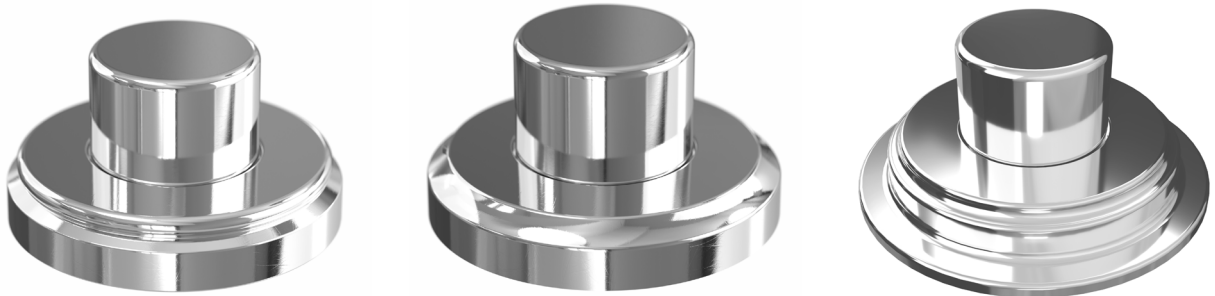

BEFORE YOU BEGIN YOUR INSTALLATION:

1

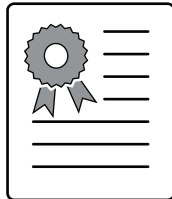

Observe all local plumbing codes.

2



Inspect plumbing for signs of damage. Replace as necessary.

3



DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS AND MATERIALS:


WARNING: Cancer and reproductive harm - see www.P65Warnings.ca.gov

IMPORTANT!

- Read these instructions and plan the installation before beginning.
- Component location, spacing, and situational requirements can vary.


AIR SWITCH INSTALL

1.

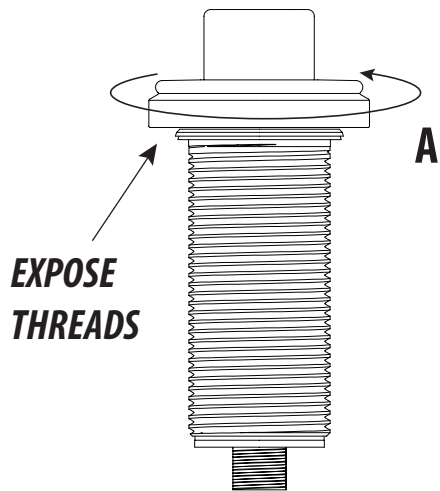


Before inserting air switch into hole, loosen switch base (A) until threads are exposed.

2.

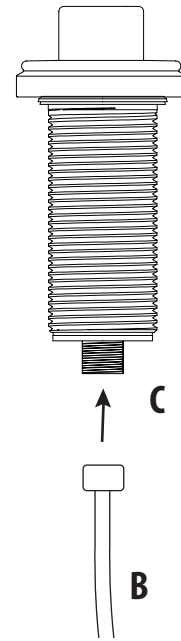


Slide clear tubing (B) into tube fitting (C) at bottom of air switch shroud.

3.

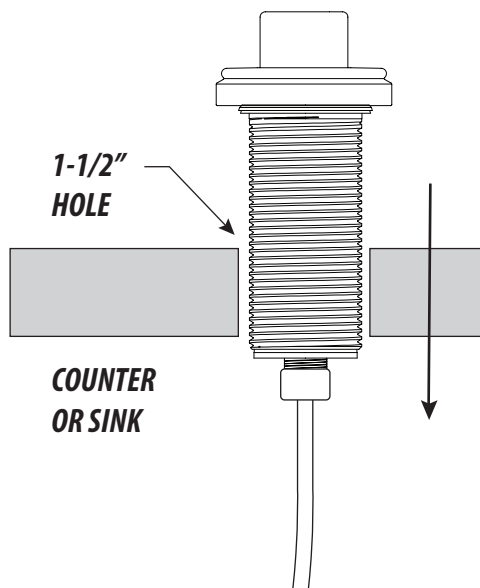


Fit air switch and tubing through 1-1/2" hole on counter or sink. (No plumbers putty is required. O-ring seals base).

4.

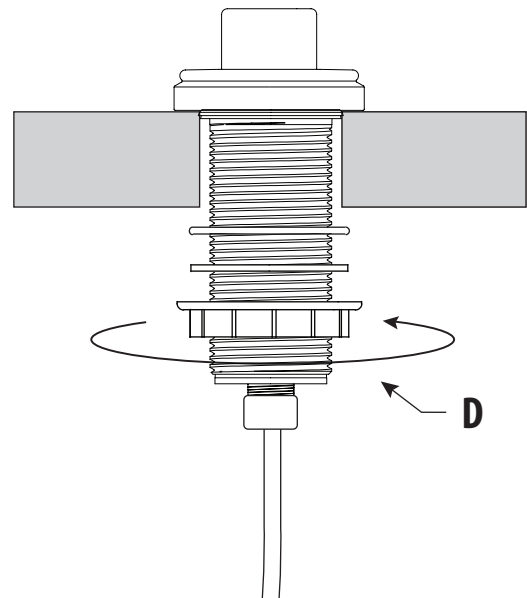


Slide washer up then screw the clamp nut onto threaded shroud. Hand tighten nut to underside of sink or counter until snug.

5.

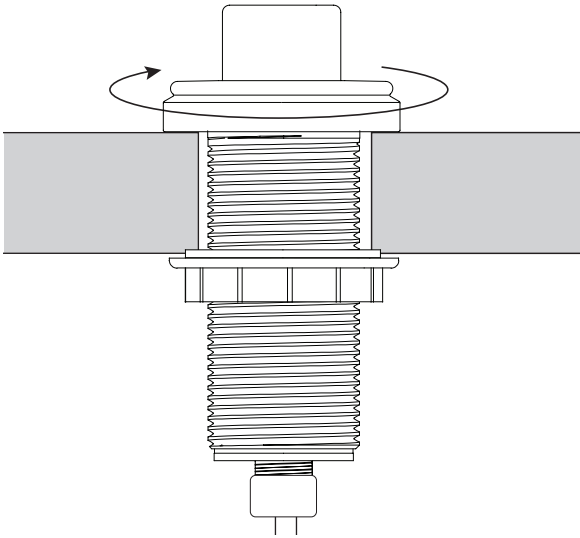


Hand tighten switch base back down to cover threads.

6.

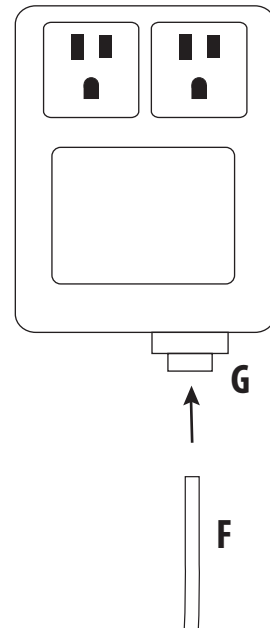

Slide other end of tubing (F) into tube fitting at bottom of control box (G).

7.

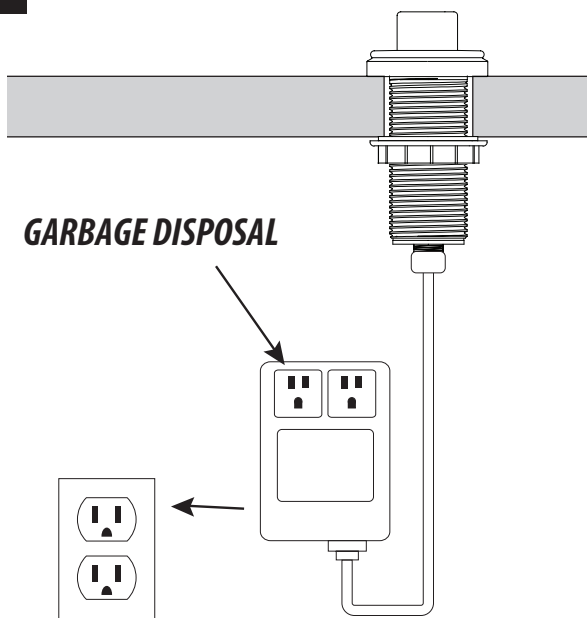

Plug control box into undersink electrical outlet. Plug garbage disposal into either dual outlet.

ASPECT
BY WATERSTONE

41180 Raintree Court, Murrieta, CA 92562
888-350-4725
www.aspectfaucets.com