INSTALLATION INSTRUCTIONS Percy[™] Wall Mounted



ш

S

ш

ſ

ш

£

0

LL

ш


>

∢


S

Percy[™] Wall Mounted Accessories Robe Hook – Model D35105.210

Robe Hook – Model D35105.210 Towel Bar 5-1/2" – Model D35105.160 Towel Bar 24" – Model D35105.240 Tissue Holder – Model D35105.235

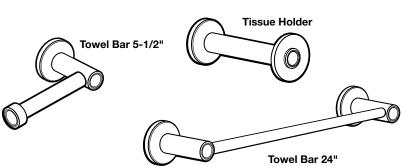

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

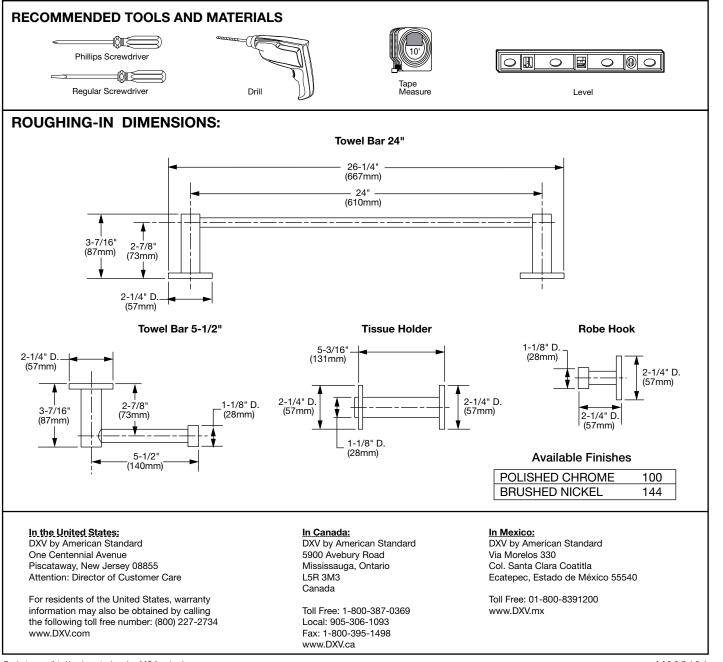

INSTALL WALL BRACKET

- The wall mounted accessories (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. *IMPORTANT: The *center line for the MOUNTING PLATE (4) must be level or the wall accessory will not mount level.* Using the MOUNTING PLATE (4) as a template mark the three spots for the ANCHORS (3). If MOUNTING PLATE (4) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (4) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATE (4) to wall with SCREWS (2).

INSTALL ACCESSORY

2

